


Customizing Styles Advanced Operations PS1500/PS1500A

You can customize the preset styles found on the PS1500/PS1500A to suit your musical tastes. Follow this advanced operations guide to name and store a customized style as a programmable preset.


STEP 1 After pressing the **SINGLE TOUCH PLAY BUTTON**, select and make the changes desired to the preset style of your choice.

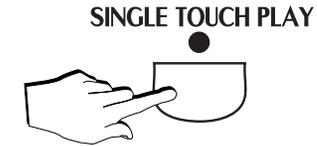


STEP 2 Press the **STORE PRESET BUTTON**.




STEP 3 Rotate the **ALPHA DIAL** to select the desired empty location where you will save your customized style. You should start at Preset #33 - the first 32 Presets are the factory presets. Press **ENTER** to store your customized preset.

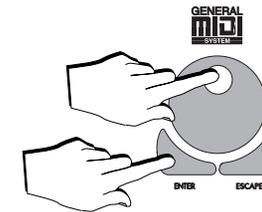

STEP 4 Press the **PRESET BUTTON** in the **EDIT** section. Press the **PAGE + BUTTON** and advance to the last page in the section (name preset page).

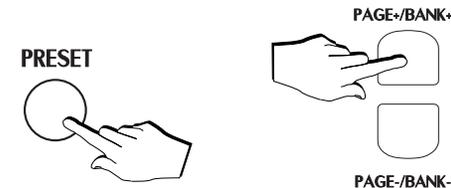

STEP 5 Look above the keys at the set of letters and use the keys to name your new preset. When you have finished, press the **STORE PRESET BUTTON** and then the **ENTER BUTTON**. Your new preset has been stored in Group 5, Location 1 (preset #33).

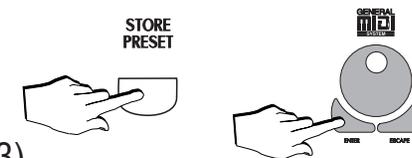


Recording A Sample Advanced Operations


PS1500/PS1500A

You can sample (record) any sound using a high impedance microphone on the PS1500/PS1500A. Follow this advanced operations guide to sample your own voice and play it back on the keyboard.


STEP 1 Press the **GRAND PIANO BUTTON** to use as a starting point. Press the **GENERAL BUTTON** in the edit section. Press the **F1 BUTTON** so that the display screen reads **INPUT=ON**.

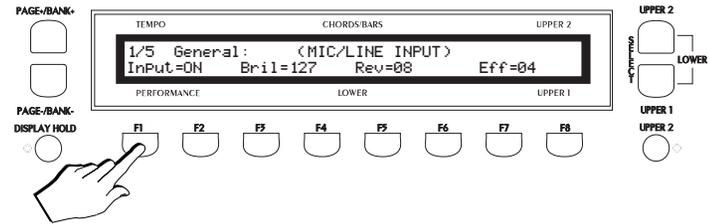


STEP 2 Insert a high impedance microphone into the MIC IN jack found on the rear jack panel of the PS1500. Make sure the **MASTER** and **MIC/LINE SLIDERS** are set to about 3/4 of full volume. Turn the small **GAIN CONTROL** clockwise until you hear your voice at a comfortable level when speaking into the microphone.

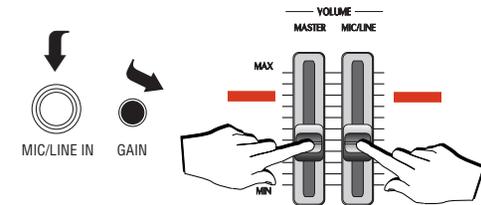

STEP 3 Press the **SAMPLE RECORD BUTTON**. Press the **F1 BUTTON** below **Spl A (sample A)** in the display.

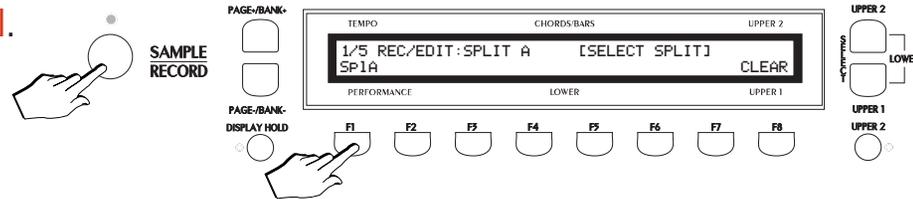

STEP 4 Press the **F6 BUTTON** to select HIGH or LOW sampling frequency. HIGH will give you three seconds of sampling time and LOW will give you six seconds of sampling time (with reduced frequency response). Press the **F8 BUTTON** and immediately speak into the microphone to sample. When the sampling stops automatically, play middle C on the keyboard to hear your voice!

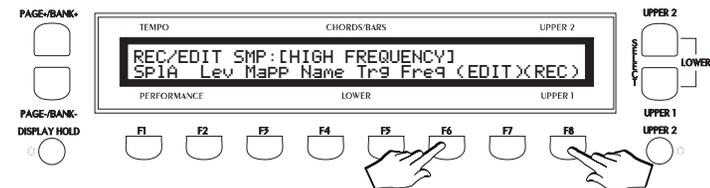


Saving To Disk Advanced Operations


PS1500/PS1500A

You can save your customized songs, styles and presets to a 3 1/2" High Density Disk. Follow this advanced operations guide to save all these items to disk in one operation.

STEP 1 Press the **DISK BUTTON**. Press the **PAGE+/- BUTTONS** to advance to the SAVE page. Make sure you have inserted a blank formatted 3 1/2" High Density Disk before proceeding.

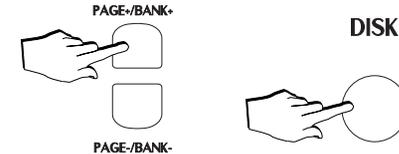

STEP 2 A display screen appears now asking you to indicate what you wish to save. Press the **F8 BUTTON** to select ALL. Press the **ENTER BUTTON** now to complete the process.

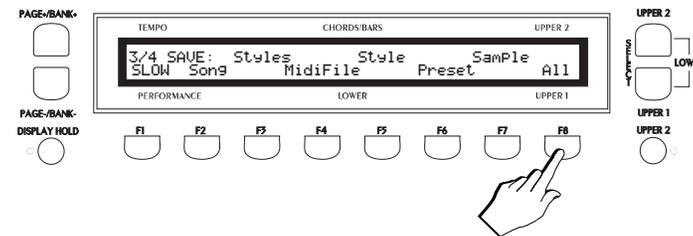

Note: At this point, you have saved all custom style, song and preset information present in memory to the disk. You can only have one set of the complete contents of memory on a single disk. If the disk already contains a saved set of PS1500 information, you will replace it with this procedure. Use a new disk if you wish to avoid this situation.

