 


Customizing Styles Advanced Operations PS2500/GPS2500

You can customize the Single Touch Play settings for all of the 96 built-in Accompaniment Styles. Follow this advanced operations guide to store your custom Single Touch Play settings!

STEP 1 Press the **SINGLE TOUCH PLAY BUTTON**.
 Make sure the LED above the button is on.
 Select the style you wish to alter and proceed to make the changes desired. You can store changes to sounds, tempo, effects and harmony settings.

SINGLE TOUCH PLAY

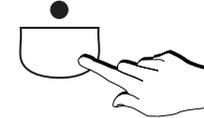

STEP 2 Press the **STORE PRESET BUTTON**. You will see the display screen pictured here. To save the new preset as the Single Touch Play settings for the style, just press the **ENTER BUTTON**.



STEP 3 Select the style you have customized, making sure Single Touch Play is activated. You will notice an asterisk now just to the right of the style name indicating the style has been altered.




Multimedia Advanced Operations Part 1 PS2500/GPS2500

You can create a song yourself containing melody score, lyrics, and chords.
Follow this advanced operations guide and bring vision to your own music!

STEP 1 Select a song to use for this process. Make sure to use a song with a single note melody line present on one of the tracks. Now press the **EDIT SEQUENCE BUTTON**. Press the **F6 BUTTON (EDIT SCORE)** to proceed.




STEP 2 Press the **F4 BUTTON (GET SCORE)**. Turn the **ALPHA DIAL** until the track number containing the melody line appears in the box. Press the **ENTER BUTTON** to confirm your choice.

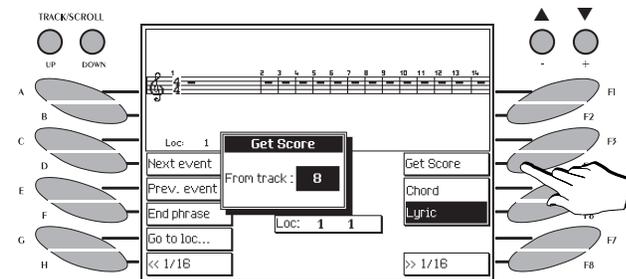

Note: If you use Quick Record for your song, the melody will be on Track 8.

STEP 3 Press the **SOFT BUTTON D (NEXT EVENT)** until the first melody note is properly indexed. Use the **keyboard to enter the letters and punctuation**. After each syllable or word is completed under the melody note, press the **SOFT BUTTON D** to both enter and advance.

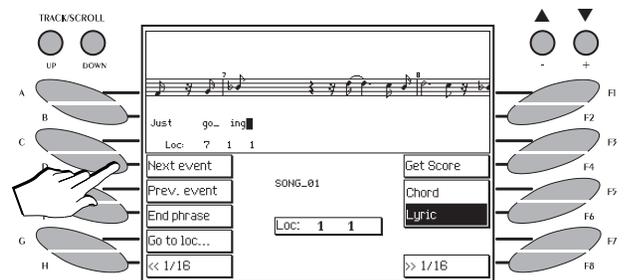


Note: Use the underscore symbol between syllables to join the word during lyric display playback.

Multimedia Advanced Operations


Part 2

PS2500/GPS2500


STEP 4 Press the **F5 BUTTON** to add chords to your score. Simply play the chord (below the F#3 split) you wish too add. Advance with the **SOFT BUTTON D** or **E** as you did to enter the lyrics. When you have finished totally with your score, Press the **ESCAPE BUTTON**.

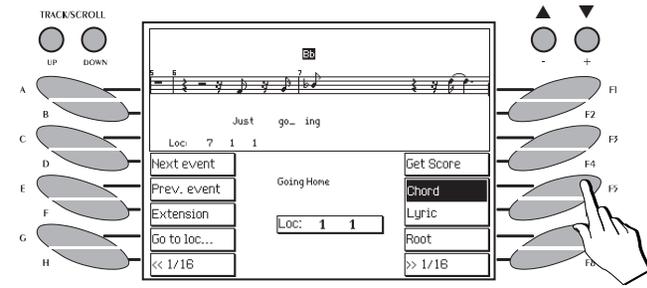

STEP 5 Press the **F8 BUTTON** now to enter your song name and publisher information. Use the keyboard as you did with lyrics to enter the letters. Use the **CURSOR ARROWS** to move down the through the categories. Press the **ENTER BUTTON** when you have finished to enter the information.

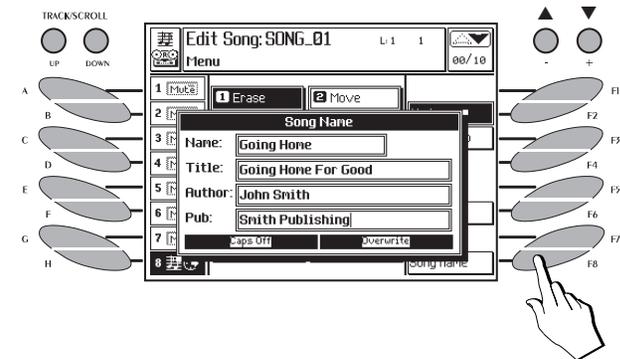

STEP 6 Press the **SCORE BUTTON** to view your completed score.

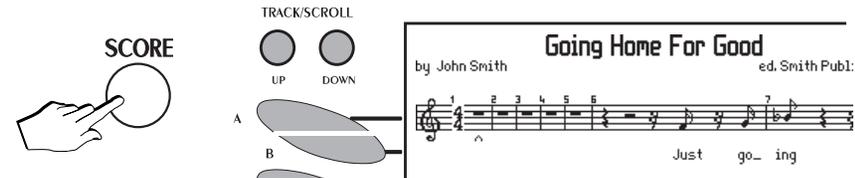


Saving To Disk

Advanced Operations



PS2500/GPS2500

The Pianovelle PS/GPS2500 can save your custom presets, styles and songs to a 3 1/2" High Density Disk. Follow the steps below to save all these items to disk in one operation.



STEP 1 Press the **DISK BUTTON**. Press the **PAGE/BANK BUTTONS** to advance to the **SAVE** page. Insert a blank formatted 3 1/2" High Density Disk before proceeding.

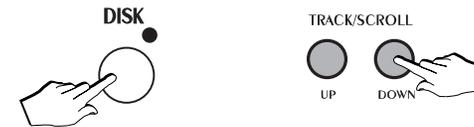

STEP 2 Using the **CURSOR ARROWS**, highlight **SINGLE** and **BLOCK** in the display screen. When you have done this, press the **ENTER BUTTON 2X**.

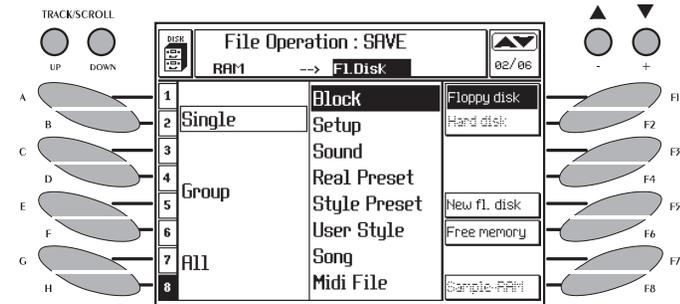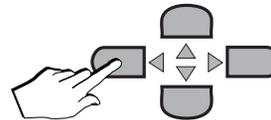

STEP 3 Using the keyboard, name your new block. If you use the name **AUTOLOAD**, your disk will automatically load if it is inserted in the disk drive when you power up the instrument. When you have finished naming your block, press the **ENTER BUTTON 2X** to save to disk. When the clock disappears from your display screen, the process is completed. Press the **ESCAPE BUTTON 2X** to exit.

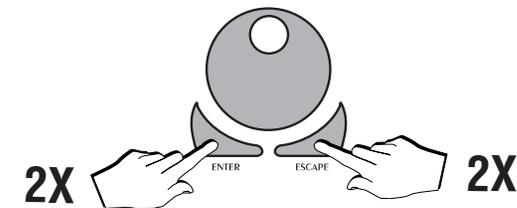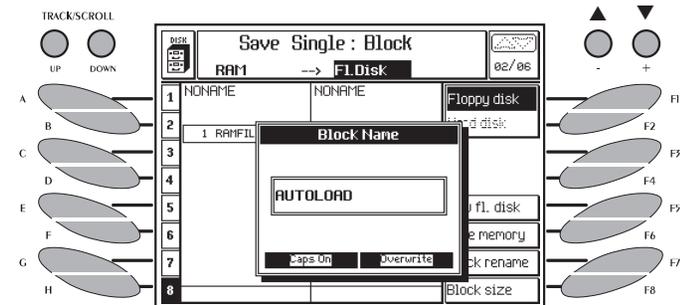

Note: On the PS/GPS2500, we use the term **BLOCK** to refer to the complete contents of system memory at any time. All items you have modified will be saved when using this command.