

CON1	CON2	CON3	CON4-5	CON6-B	CON9-10	CON11	CON12
010 020 030 040 +12V 050 -12V 060 AGND 070 AGND 080 +35V 090 -35V 010 0110 0120 0130 0140 0150 0160 LGND 0170 LGND 0180 0190 0200 0210 0220 0230 0240 +5V 0250 LGND 0260 LGND 0270 0280 0290 0300 0310 0320	010 020 030 040 +12V 050 -12V 060 AGND 070 AGND 080 +35V 090 -35V 010 0110 0120 0130 0140 0150 0160 LGND 0170 LGND 0180 0190 RB 0200 STR CHOISE B6 0210 B4 0220 B2 0230 B0 0240 +5V 0250 LGND 0260 LGND 0270 LGND 0280 SEL7 0290 SEL5 0300 SEL3 0310 SEL1 0320	010 020 030 040 +12V 050 -12V 060 AGND 070 AGND 080 +35V 090 -35V 010 0110 0120 0130 0140 0150 0160 LGND 0170 LGND 0180 0190 GEN2 0200 RB CHOISE B6 0210 B4 0220 B2 0230 B0 0240 +5V 0250 LGND 0260 LGND 0270 LGND 0280 SEL7 0290 SEL5 0300 SEL3 0310 SEL1 0320	010 020 030 040 +12V 050 -12V 060 AGND 070 AGND 080 +35V 090 -35V 010 0110 0120 0130 0140 0150 0160 LGND 0170 LGND 0180 0190 GEN2 0200 RB CHOISE B6 0210 B4 0220 B2 0230 B0 0240 +5V 0250 LGND 0260 LGND 0270 LGND 0280 SEL7 0290 SEL5 0300 SEL3 0310 SEL1 0320	010 020 030 040 +12V 050 -12V 060 AGND 070 AGND 080 +35V 090 -35V 010 0110 0120 0130 0140 0150 0160 LGND 0170 LGND 0180 0190 GEN2 0200 RB CHOISE B6 0210 B4 0220 B2 0230 B0 0240 +5V 0250 LGND 0260 LGND 0270 LGND 0280 SEL7 0290 SEL5 0300 SEL3 0310 SEL1 0320	010 020 030 040 +12V 050 -12V 060 AGND 070 AGND 080 +35V 090 -35V 010 0110 0120 0130 0140 0150 0160 LGND 0170 LGND 0180 0190 0200 0210 0220 0230 0240 +5V 0250 LGND 0260 LGND 0270 LGND 0280 0290 0300 0310 0320	010 020 030 040 +12V 050 -12V 060 AGND 070 AGND 080 +35V 090 -35V 010 0110 0120 0130 0140 0150 0160 LGND 0170 LGND 0180 0190 0200 0210 0220 0230 0240 +5V 0250 LGND 0260 LGND 0270 LGND 0280 0290 0300 0310 0320	010 020 030 040 +12V 050 -12V 060 AGND 070 AGND 080 +35V 090 -35V 010 0110 0120 0130 0140 0150 0160 LGND 0170 LGND 0180 0190 0200 0210 0220 0230 0240 +5V 0250 LGND 0260 LGND 0270 LGND 0280 0290 0300 0310 0320
POWER SUPPLY CARD	PROCESSOR CARD	GENERATOR CARD	VOICE CARD 1-2	VOICE CARD 3-5	AMPLIFIER CARD A & B	AMPLIFIER CARD C	OTA CARD