



- 1A AMP1
- 1C AMP2
- 2A AMP3
- 2C AMP4
- 3A AMP5
- 3C AMP6
- 4A FROM ECHO A
- 4C FROM ECHO B
- 5A +12V
- 5C -12V
- 6C -12V
- 7A AGND
- 7C AGND
- 8A AGND
- 8C AGND
- 9A +35V
- 9C -35V
- 10A -35V
- 10C -35V
- 11A VOLUME
- 11C MUTE
- 12A PHONES
- 12C TO ECHO
- 13A PA5A
- 13C PA5A
- 14A PA6A
- 14C PA6A
- 15A PA3A
- 15C PA3A
- 16A PA4A
- 16C PA4A
- 17A PA1A
- 17C PA1A
- 18A PA2A
- 18C PA2A
- 19A PA5B
- 19C PA5B
- 20A PA6B
- 20C PA6B
- 21A PA3B
- 21C PA3B
- 22A PA4B
- 22C PA4B
- 23A PA1B
- 23C PA1B
- 24A PA2B
- 24C PA2B
- 25A +5V
- 25C +5V
- 26A LGND
- 26C LGND
- 27A LGND
- 27C LGND
- 28A
- 28C
- 29C
- 30A
- 30C
- 31A
- 31C
- 32A
- 32C