



GENERATOR CARD  
(COMPONENT-SIDE VIEW)

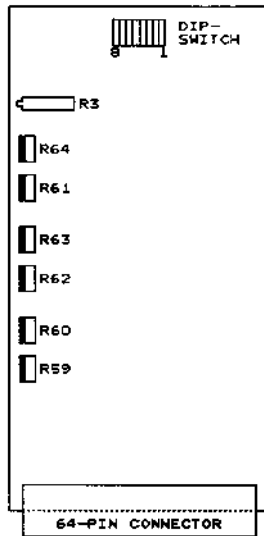


- R3 = MAIN TUNING
- R64 = TREMLANT DEPTH GREAT
- R61 = TREMLANT SPEED GREAT
- R63 = TREMLANT DEPTH SHELL
- R62 = TREMLANT SPEED SHELL
- R60 = TREMLANT DEPTH CHOIR
- R59 = TREMLANT SPEED CHOIR
- DS1-DS3 = TUNING SHELL
- DS4-DS8 = CHORUS INTENSITY SHELL

VOICE CARD  
(COMPONENT-SIDE VIEW)

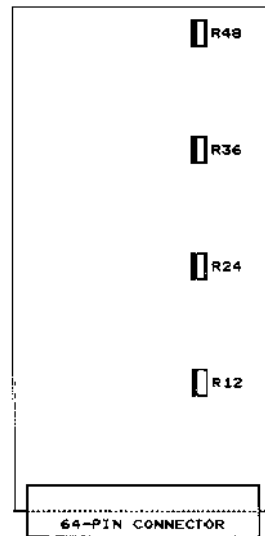


- R12 = DC-OFFSET VOICE D (DISTORSION VOICE D)
  - R24 = DC-OFFSET VOICE C (DISTORSION VOICE C)
  - R36 = DC-OFFSET VOICE B (DISTORSION VOICE B)
  - R48 = DC-OFFSET VOICE A (DISTORSION VOICE A)
- NOTE: R12-R24-R36-R48 ARE NOT FOR CHANGING VOLUMES!!
- TURNING THESE POTENTIOMETERS WILL GIVE DISTORSION!!

AMPLIFIER CARD  
(COMPONENT-SIDE VIEW)

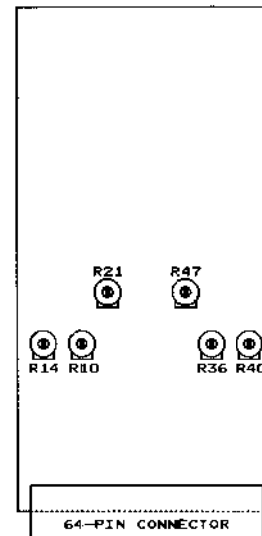

- R10 = BASS LEFT AMPLIFIER
- R14 = TREBLE LEFT AMPLIFIER
- R21 = VOLUME LEFT AMPLIFIER
- R36 = BASS RIGHT AMPLIFIER
- R40 = TREBLE RIGHT AMPLIFIER
- R47 = VOLUME RIGHT AMPLIFIER

OTA CARD  
(COMPONENT-SIDE VIEW)

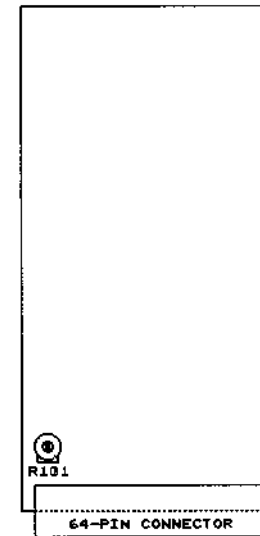

- R101 = INPUT AMPLITUDE ECHO