

SOUL 2013 - 1.6 GDI REPAIR AND MAINTENANCE

(First Numbers are page number within section - Numbers in parenthesis are overall document page)

GENERAL INFORMATION (23 PAGES)

- 01 - 07 (01-07) : Identification Number Locations
- 08 - 09 (08-09) : Warning Notices
- 09 - 11 (09-11) : Lifting and Towing
- 11 - 12 (11-12) : Tightening Torque Table
- 13 - 23 (13-23) : General Service Information

AUTOMATIC TRANSAXLE (98 PAGES)

- 01 - 04 (24-27) : Specifications
- 05 (28) : Special Service Tools
- 06 (29) : Components Location
- 06 - 13 (29-36) : Transaxle Removal & Installation
- 13 - 16 (36-39) : Transaxle Hydraulic Components Location
- 17 - 19 (40-42) : Transaxle Fluid Replacement
- 19 - 24 (42-47) : Transaxle Valve Body Description & Service
- 24 - 29 (47-52) : Transaxle Oil Pump Description & Service
- 29 - 35 (52-58) : Transaxle Clutch & Brake Description & Service
- 35 - 47 (58-70) : Transaxle Control System
- 48 - 51 (71-74) : Transaxle Oil Temperature Sensor
- 51 - 57 (74-80) : Transaxle Input Speed Sensor
- 57 - 63 (80-86) : Transaxle Output Speed Sensor
- 63 - 58 (86-91) : Torque Converter Control Solenoid Valve
- 68 - 69 (91-92) : Brake Control Solenoid Valve
- 70 - 71 (93-94) : Line Pressure Control Solenoid Valve
- 72 - 73 (95-96) : Clutch Control Solenoid Valve
- 74 - 75 (97-98) : Underdrive Brake Control Solenoid Valve
- 76 - 77 (99-100) : Overdrive Clutch Control Solenoid Valve
- 78 - 86 (101-109) : SS-A and SS-B Solenoid Valves
- 86 - 89 (109-112) : Transaxle Inhibitor Switch
- 90 - 98 (113-121) : Shift Lever/Cable

BODY - INTERIOR & EXTERIOR (136 PAGES)

- 01 - 02 (122-123) : General Information
- 03 (124) : Special Body Service Tools
- 04 - 05 (125-126) : Troubleshooting
- 05 - 14 (126- 135) : Exterior Body Dimensions/ Panel Mounting Points
- 15 - 22 (136-143) : Interior Body Dimensions/Panel Mounting Points

23 - 24 (144-145) : Rear Body Dimensions/Panel Mounting Points
25 - 28 (146-149) : Underbody Dimensions/Panel Mounting Points
28 - 29 (149-150) : Exterior - Front Fender Repair
29 - 32 (150-153) : Exterior - Hood Repair
32 - 35 (153-156) : Exterior - Tailgate Repair
35 - 46 (156-167) : Front Door Repair - Interior and Exterior
47 - 57 (168-178) : Rear Door Repair - Interior and Exterior
57 - 58 (178-179) : Exterior moldings / Roof Rack
58 - 65 (179- 186) : Sunroof (see pg 474-488 for electrical)
65 - 66 (186-187) : Exterior Mirrors
66 - 67 (187-188) : Engine cowl cover
67 - 71 (188-192) : Center Console
71 - 88 (192-209) : Dashboard (Crash Pad)
88 - 94 (209-215) : Interior Roof Trim
94 - 99 (215-220) : Interior Trim Components
99 - 105 (220-226) : Windshield
105 - 108 (226-229) : Front Bumper & Repair
108 -111 (229-232) : Rear Bumper & Repair
111 - 119 (232-240) : Front Seat & Repair
119 - 128 (240-249) : Rear Seat & Repair
128 - 132 (249-253) : Front Seat Belts
132 - 136 (253-257) : Rear Seat Belts

BODY ELECTRICAL SYSTEM (333 Pages)

01 - 05 (258-262) : General Information (Incl Resetting Audio/Clock/Computer/etc)
05 - 21 (262-278) : Audio Specifications & Components
21 - 30 (278-287) : Speakers
30 - 32 (287-289) : Antenna
32 - 39 (289-296) : Audio Steering Wheel Remote / Aux Input Control Schematics
39 - 52 (296-309) : Audio Troubleshooting
52 - 58 (309-315) : Turn Signal / Multi-Function Switch
58 - 61 (315-318) : Horn
61 - 96 (318-353) : Smart Key
96 - 111 (353-368) : Keyless Entry & Alarm
111 - 143 (368- 400) : Body Control Module
143 - 146 (400-403) : Seat Electrical Heater
146 - 157 (403-414) : Fuses and Relays
157 - 170 (414-427) : Gauges and Indicators
170 - 175 (427-432) : Power Door Locks
175 - 179 (432-436) : Power Door Mirrors
180 - 190 (437-447) : Power Windows
190 - 195 (447-452) : Rear Defroster

195 - 206 (452-463) : Front Wiper/Washer
206 - 213 (463-470) : Rear Wiper/Washer
213 - 216 (470-473) : ElectroChromic Rearview Mirror
217 - 226 (474-483) : Hands Free System (Voice/Mic/Cell)
226 - 231 (474-488) : Sunroof Electrical
231 - 232 (488-489) : Lighting System - Specifications
232 - 240 (489-497) : Headlights
240 - 242 (497-499) : Turn Signals
242 - 244 (499-501) : Overhead Interior Lights
244 - 246 (501-503) : Hazard Lights
246 - 247 (503-504) : Interior Light Rheostat
247 - 248 (504-505) : Front Fog Lights
248 - 249 (505-506) : License Lamps
249 - 250 (506-507) : High Mtd Rear Stop Light
250 - 251 (507-508) : Rear Combination Stop/Brake Lights
251 - 254 (508-511) : Lighting System Troubleshooting
254 (511) : Daytime Running Lights
254 - 283 (511-540) : Immobilizer / Key Transponders
283 - 284 (540-541) : Immobilizer Troubleshooting
284 - 285 (541-542) : Immobilizer Repair
286 - 297 (543-554) : Rear Park Assist
297 - 313 (554-570) : Engine Start Button (Dashboard) / Power Distribution Module
313 - 328 (570-585) : Front/Rear Parking Assist Control Unit / Sensors
328 - 330 (585-587) : Ignition Switch
330 - 333 (587-590) : Back Up Camera

BRAKE SYSTEM (87 Pages)

01 - 03 (591-593) : General Information / Specifications
03 - 04 (593-594) : Special Service Tools
04 - 07 (594-597) : Brake System Troubleshooting / Repair
07 - 11 (595-601) : Brake Booster System & Repair
11 - 14 (601-604) : Master Cylinder & Repair
14 - 17 (604-607) : Brake Line & Repair
17 - 20 (607-610) : Brake Pedal & Repair
20 - 24 (610-614) : Front Disc Brakes & Repair
24 - 28 (614-618) : Rear Disc Brakes & Repair
28 - 35 (618-625) : Rear Drum Brakes & Repair
35 - 48 (625-638) : Rear Parking Brake & Repair
48 - 77 (638-667) : ESC Electronic Stability Control / Anti-Lock Brake Systems
77 - 79 (667-669) : Electronic Stability Control Module
79 - 82 (669-672) : ESC Front Wheel Sensors
82 - 84 (672-674) : ESC Rear Wheel Sensors

- 85 - 86 (675-676) : ESC Yaw and Lateral G Sensor
- 86 -87 (676-677) : ESC Switch On/Off
- 87 (677) : ESC Steering Wheel Angle Sensor

CLUTCH - MANUAL TRANSMISSION (13 Pages)

- 01 (678) General Information
- 02 (679) Special Tools
- 02 - 05 (679-682) : Clutch Components - Location - Repair
- 05 - 08 (682-685) : Clutch Pedal
- 09 - 13 (686-690) : Clutch Master Cylinder / Clutch Release Cylinder

DRIVESHAFT & AXLE (20 Pages)

- 01 (691) : General Information
- 01 - 02 (691-692) : Special Service Tools
- 02 (692) : Troubleshooting
- 03 - 08 (693-698) : Front Hub / Knuckle
- 08 - 17 (698-707) : Front Driveshaft
- 17 - 20 (707-710) : Rear Axle / Hub / Carrier

EMISSION CONTROL SYSTEM (23 Pages)

- 01 - 07 (711-717) : General Information / Troubleshooting
- 07 - 13 (717-723) : Crankcase Emission Control System / PCV
- 13 - 20 (723-730) : Evaporative Emissions Control System
- 20 - 21 (730-731) : Exhaust Emissions Control System / Catalytic Converter
- 21 - 23 (731-733) : CVVT / Continuously Variable Valve Timing System

ENGINE ELECTRICAL SYSTEM (57 Pages)

- 01 - 02 (734-735) : General Information / Specifications
- 02 - 04 (735-737) : Troubleshooting / Special Service Tools
- 04 - 10 (737-743) : Ignition System
- 10 - 18 (743-751) : Charging System General Information / Repair
- 18 - 24 (751-757) : Alternator Repair
- 24 - 28 (757-761) : DC-DC Converter
- 28 - 36 (761-769) : Battery
- 36 - 37 (769-770) : Battery Sensor
- 37 - 41 (770-774) : Starting System General Description & Repair
- 41 - 49 (774-782) : Starter
- 49 - 50 (782-783) : Starter Relay
- 50 - 57 (783-790) : Cruise Control

ENGINE MECHANICAL 1.6 LITER (154 Pages)

- 01 - 11 (791-801) : General Information / Specifications/ Capacities
- 11 - 13 (801-803) : Compression Check
- 13 - 17 (803-807) : Valve Clearance Inspection & Adjustment
- 17 - 19 (807-809) : Troubleshooting
- 20 - 21 (810-811) : Special Service Tools
- 21 (811) : Engine Mounts
- 22 - 33 (812-823) : Engine & Transaxle Removal
- 33 - 61 (823-851) : Timing Chain & Tensioner Repair/ Removal
- 61 - 97 (851-887) : Cylinder Head Components and Repair
- 97 - 121 (887-911) : Engine Block Components and Repair
- 121 - 123 (911-913) : Cooling System Components and Servicing (Flush)
- 123 - 127 (913-917) : Thermostat Repair and Troubleshooting
- 127 - 133 (917-923) : Water Pump Repair/Replace/Troubleshooting
- 133 - 137 (923-927) : Radiator / Repair / Replace
- 137 - 138 (927-928) : Oil Pump Components
- 138 - 141 (928-931) : Oil Change
- 142 - 143 (932-933) : Oil Pan / Replace
- 143 - 144 (933-934) : Oil Pressure Switch
- 144 - 148 (934-938) : Intake Manifold / Removal / Repair
- 148 - 151 (938-941) : Exhaust Manifold / Removal
- 152 - 154 (942-944) : Muffler / Removal / Repair

FUEL SYSTEM 1.6 (195 Pages)

- 01 - 06 (945-950) : Specifications
- 07 (951) : Special Tools
- 07 - 17 (951-961) : Fuel System Troubleshooting
- 17 - 21 (961-965) : Engine Control System / Description
- 21 - 26 (965-970) : Engine Control System / Components
- 26 (970) ECM Engine Control Module - Schematic Diagrams (AT / MT)
- 26 - 31 (970-975) : ECM Terminal Function (Manual Transmission)
- 31 - 38 (975-982) : ECM Terminal Signal (Manual Transmission)
- 38 - 45 (982-989) : ECM Terminal Function (Automatic Transmission)
- 45 - 53 (989-997) : ECM Terminal Signal (Automatic Transmission)
- 53 - 60 (997-1004) : ECM Circuit Diagrams (AT / MT)
- 60 - 62 (1004-1006) : ECM Repair / Removal
- 62 - 64 (1006-1008) : ETC Electronic Throttle Control System - Description / Troubleshooting
- 64 - 69 (1008-1013) : ETC Electronic Throttle Control Specifications / Schematics / Repair
- 69 - 72 (1013-1016) : MAPS Manifold Absolute Pressure Sensor - Description / Troubleshooting
- 72 - 75 (1016-1019) : IATS Intake Air Temperature Sensor - Description / Repair / Schematics
- 75 - 78 (1019-1022) : ECTS Engine Coolant Temperature Sensor - Specs / Schematics / Repair
- 78 - 82 (1022-1026) : CKPS Crankshaft Position Sensor - Description / Troubleshooting / Repair

82 - 87 (1026-1031) : CMPS Camshaft Position Sensor - Description / Troubleshooting / Repair
87 - 90 (1031-1034) : Knock Sensor - Description / Schematics / Repair
90 - 97 (1034-1041) : Heated Oxygen Sensor - Description / Troubleshooting / Repair
97 - 100 (1041-1044) : Fuel Rail Pressure Sensor - Description / Troubleshooting / Repair
100 - 103 (1044-1047) : Accelerator Position Sensor - Description / Schematic / Repair
103 - 106 (1047-1050) : Fuel Tank Pressure Sensor - Description / Schematics / Repair
106 - 114 (1050-1058) : Fuel Injector - Description / Specs / Troubleshooting / Repair
114 - 117 (1058-1061) : Fuel Tank Purge Control Solenoid Valve - Description / Repair
117 - 120 (1061-1064) : CVVT Oil Control Valve - Description / Schematics / Repair
120 - 123 (1064-1067) : Variable Intake Manifold Solenoid - Description / Schematics / Repair
123 - 126 (1067-1070) : Fuel Pressure Control Valve - Description / Schematics / Repair
126 - 128 (1070-1072) : Canister Close Valve (Fuel) - Description / Schematics / Repair
128 - 144 (1072-1088) : ISG - Idle Stop & Go - Description / Troubleshooting / Repair / Sensors
144 - 151 (1088-1095) : Special AGM Absorbent Glass Material Battery for ISG
151 - 155 (1095-1099) : Idle Stop & Go System - DC/DC Converter
155 - 156 (1099-1100) : Idle Stop & Go Switch - Description / Repair
156 - 166 (1100-1109) : Idle Stop & Go System - Alternator
166 - 167 (1109-1110) : Idle Stop & Go System - Starter
167 - 173 (1110-1117) : Idle Stop & Go System - Electric Oil Pump - Description / Repair
173 - 174 (1117-1118) : Idle Stop & Go System - Brake Switch
174 - 175 (1118-1119) : Idle Stop & Go System - Door Switch
175 - 176 (1119-1120) : Idle Stop & Go System - Seat Belt Switch
176 - 177 (1120-1121) : Idle Stop & Go System - Hood Switch
177 - 182 (1121-1126) : Fuel Delivery System - Fuel Line/ Components & Repair
182 - 184 (1126-1128) : Fuel Tank
184 - 185 (1128-1129) : Fuel Pump
185 - 187 (1129-1131) : Fuel Filter
187 - 188 (1131-1132) : Fuel Filler Neck Assembly
188 - 189 (1132-1133) : Accelerator Pedal
189 - 191 (1133-1135) : Fuel Delivery Pipe
191 - 195 (1135-1139) : High Pressure Fuel Pump

HEATING, VENTILATION, AIR CONDITIONING (63 Pages)

01 (1140) : HVAC General Information
02 - 05 (1141-1144) : HVAC Troubleshooting / Special Tools / Safety
05 - 09 (1144-1148) : HVAC Description / Repair (Freon Charge - Evacuation)
09 - 11 (1148-1150) : HVAC Components
11 - 18 (1150-1157) : AC Compressor / Compressor Oil
18 - 21 (1157-1160) : AC Condenser
21 - 23 (1160-1162) : AC Pressure Transducer
23 - 25 (1162-1164) : AC Evaporator
25 - 27 (1164-1166) : AC Refrigerant Line

- 27 - 30 (1166-1169) : AC In-Car Sensors (Temp / Photo)
- 30 - 31 (1169-1170) : AC Ambient Air Temperature Sensor
- 31 - 37 (1170-1176) : Heater Unit Components & Repair
- 37 - 41 (1176-1180) : Heater Temperature Control Actuator
- 41 - 44 (1180-1183) : Heater Mode Control Actuator
- 44 - 45 (1183-1184) : Blower Motor
- 45 - 46 (1184-1185) : HVAC Blower Power Mosfet
- 46 - 47 (1185-1186) : HVAC Blower Resistor
- 47 - 48 (1186-1187) : Cabin Air Filter
- 48 - 50 (1187-1189) : HVAC Blower Intake Actuator (Fresh Air - Recirculate)
- 50 - 53 (1189-1192) : HVAC Control Unit (Manual)
- 53 - 61 (1192-1200) : HVAC Control Unit (Automatic)
- 61 - 63 (1200-1202) : Heater Control Unit

MANUAL TRANSAXLE (18 Pages)

- 01 (1203) : General Information
- 01 - 02 (1203-1204) Special Tools
- 02 - 04 (1204-1206) : Fluid Inspection / Replacement
- 04 (1206) : MT Components
- 04 - 08 (1206-1210) : MT Removal
- 08 - 16 (1210-1218) : Shift Lever / Control Cable
- 16 - 18 (1218-1220) : MT Backup Lamp Switch

SUPPLEMENTAL RESTRAINT SYSTEM - AIRBAGS (46 Pages)

- 01 - 06 (1221-1226) : General Information / Specs / Tools / Safety
- 06 - 08 (1226-1228) : Warning Lamp Diagnosis
- 08 - 29 (1228-1249) : Airbag Replace / Repair - Component Location (Sensors)
- 29 - 32 (1249-1252) : SRS Schematics / Connectors
- 32 - 35 (1252-1255) : Driver Airbag Module & Clock Spring
- 35 - 37 (1255-1257) : Passenger Airbag Module
- 37 - 39 (1257-1259) : Side Airbag Module (Seat)
- 39 - 41 (1259-1261) : Side Curtain Airbag Module
- 41 - 42 (1261-1262) : Airbag Module Disposal
- 42 - 46 (1262-1266) : Seat Belt Pretensioner

STEERING SYSTEM (8 Pages)

- 01 (1267) : General Information / Specifications / Tools
- 01 - 05 (1267-1271) : Electric Power Steering Components & Repair
- 05 - 08 (1271-1274) : Steering Gear Box & Repair

SUSPENSION SYSTEM (50 Pages)

- 01 - 04 (1275-1278) : General Information / Tools / Troubleshooting
- 04 - 05 (1278-1279) : Front Suspension Components Location
- 05 - 10 (1279-1283) : Front Strut Assembly - Remove & Repair
- 10 - 11 (1283-1284) : Front Lower Arm - Remove and Repair
- 11 - 14 (1284-1288) : Front Stabilizer Bar Remove and Repair
- 14 - 15 (1288-1289) : Sub Frame
- 15 (1289) Rear Suspension Components Location
- 15 - 17 (1289-1291) : Rear Shock Absorbers - Remove & Repair
- 17 - 19 (1291-1293) : Rear Coil Springs
- 19 - 23 (1293-1297) : Rear Torsion Beam Axle
- 23 - 25 (1297-1299) : Front Alignment
- 25 - 30 (1299-1304) : Wheels / Tires
- 30 - 50 (1304-1324) : TPMS Tire Pressure Monitoring System